

| Project | | _ |
|---------|-------|-------|
| AIA # | SIS # | _ |
| | | |



FOR INSTALLATION OF HOBART DISPOSERS ON EXISTING CONES







Approved by______ Date_____ Date______ Date______



HOW TO REPLACE OLD FOODWASTE DISPOSERS

Each year, thousands of commercial foodwaste disposers reach the age and condition where it is more practical to replace than to maintain them.

Adapters are usually required to fit disposers to original cones (including sink or trough connections). In order to choose the correct adapter for replacement installation, follow the procedure below.

Procedure:

Step 1

Identify Cone type on chart below.

Step 2

Measure throat opening size of cone (inside diameter). (Dimension A)

A suggested method is to use two sticks or pencils. Insert them into the throat of the cone, sliding them apart until they touch the sides at the widest part of the throat.

Then remove and measure their extended length. (Figure 1)

Step 3

Measure bolt circle diameter (DISTANCE BETWEEN CENTER OF OPPOSITE BOLT HOLE). (Dimension B).

If old Disposer is still in place, measure with calipers or form one from stiff wire. Bend until ends touch center of opposite bolt heads. Remove and measure distance between ends. (Figure 2)

Step 4

When dimensions A & B and Cone Type have been determined, select proper adapter from list on facing page.

Important: Measure height of old disposer and check drain size. Compare to dimensions in specification sheet to make certain your new disposer will fit.


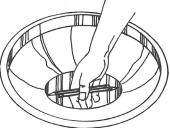


Figure 1



Type 1

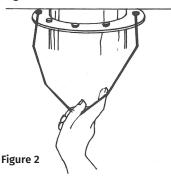

Bowl Type Cone

The Disposer is bolted directly to a turned-in flange or a loose ring inside cone.


Type 2



Cone w/Large Flange

The Disposer bolts directly to the flange on the bottom of this type Cone.

Type 3

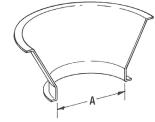

Cone w/Small Flange Lip

The Disposer fastens to a small lip on the bottom of the Cone by one of the following methods:

- Two-piece Clamp Rings spread and reassemble above cone lip – bolts fasten to Disposer.
- Loose Collar Ring slips onto the Cone before the lip is rolled on the Cone. The Disposer bolts to the collar.
- Molded or hose-type rubber connector fits over the Cone lip and is secured by means of hose clamp type connector.

Type 4



Sleeve Type Cone

Raise Disposer using adjustable support legs so that the Cone sleeve fits tightly into a seal in the mouth of the Disposer. Only FD-150 thru FD-500, FD2-150 thru FD2-300, FD3-150 thru FD3-300 and FD4-150 thru FD4-500. Disposers with adjustable legs can be used with this type Cone.

Type 5



Sleeve Type Cone

Turned-in flange, against which a seal is compressed. Only FD-150 thru FD-500, FD2-150 thru FD2-300, FD3-150 thru FD3-300 and FD4-150 thru FD4-500. Disposers with adjustable legs can be used with this type Cone.



SIZING CHART


| Cone Type | Dimension | | Head Du | Adapter | For Hobart | Constitution of the constitution of |
|-----------|--------------------------------|--------------------|---|----------|--|---|
| | A | В | Used By | Required | Models | Special Instructions |
| 1 | 4½ | 5½ | Hobart, Kitchen Pig, Salvajor, Bus Boy | ML-31167 | All | Reuse loose internal clamp ring, if present. |
| 2 | 4½ | 5½ | Waste King, Red Goat, In-Sink-Erator, National, Big Genie | ML-31159 | All | None |
| 2 | 6 | 6¾ | Atomic | ML-31160 | All | None |
| 2 | 9 | 111// ₈ | Hobart | ML-31168 | All | None |
| 3 | 4½ | _ | In-Sink-Erator, Waste King, Toledo | ML-31159 | All | None |
| 3 | 6 | _ | In-Sink-Erator, Waste King, Toledo, Bus Boy | ML-31160 | All | Remove Waste King, loosen collar, or push it up and out of the way. |
| 3 | 8 | - | In-Sink-Erator, Toledo | ML-31166 | All | Reuse clamp ring mounting screws. |
| 3 | 45/8 | _ | FMC | ML-31169 | All | None |
| 3 | 51/4 | _ | FMC | ML-31170 | All | None |
| 3 | 6 ⁵ // ₈ | _ | In-Sink-Erator, Toast-Master | ML-31171 | All | None |
| 4 | 4½ | _ | Red Goat | ML-31162 | FD2-150 FD2-200 FD2-300 FD3-150 FD3-200 FD3-300 FD-500 FD4-150 FD4-200 FD4-300 FD4-500 | None |
| 4 | 6 | _ | Waste King | ML-31163 | | None |
| 4 | 6½ | _ | Salvajor | ML-31164 | | None |
| 4 | 63//8 | _ | General Electric | ML-31165 | | None |
| 5 | 531/32 | _ | Hobart | ML-31161 | | None |
| 4 | 7 | _ | Red Goat | None | | Use Disposer legs to "jack-up" so cone sleeve is inserted in Disposer throat. |
| 3 | 7 | _ | National, Big Genie, Toledo | None | All | None |

Note: If disposer is installed in sink or trough, it will be connected to an adapter exactly like the cone connection.




STAINLESS STEEL ADAPTER KIT DESCRIPTIONS




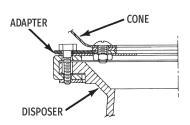

ADAPTER #ML-31167Bolts directly to a Type #1 Cone.

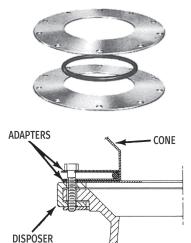


ADAPTER #ML-31162, #ML-31163, #ML31164 and #ML-31165 Use an "O" Ring to seal around the sleeve of a Type #4 Cone.

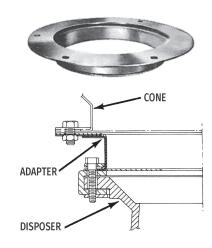


ADAPTER #ML-31166
Bolts directly to existing clamp ring of Type #3 Cone. Reuse clamp ring and screws already on the Cone.



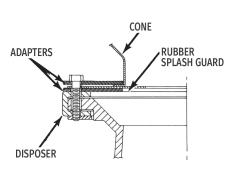


ADAPTERS #ML-31159, #ML-31160, #ML-31169, #ML-31170 and #ML-31171 Clamp to flange of Type #2 or Type #3 Cones. Rubber splash guard between solid ring and split ring. Use silicone seal to make it permanent.



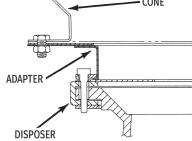

ADAPTER #ML-31168
Bolts directly to a Type #2 Cone.



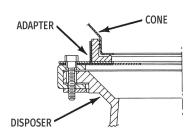

ADAPTER #ML-31161

Retains a special seal which is compressed against a Type #5 Cone.

Note: Sealastic or similiar silicone gasket material should be used if additional sealing is required when adapting a new disposer to an existing cone.

As continued product improvement is a policy of Hobart, specifications are subject to change without notice.