

# Daily Cleaning Checklist: Food Processor

## How to Keep Your Equipment in Top Shape

### 1. Starting the Process




Turn the machine off and unplug the electrical cord.

### 2. Remove & Wash Feed Parts



Remove feed tube pusher and wash it in warm water and detergent then rinse in lukewarm water. Remove the feed hopper and wash in warm water and detergent then rinse it in lukewarm water.

### 3. Lift Out Cutting Plate

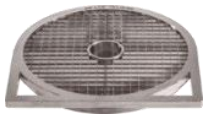

If you have used the dicing grid, push the remaining leftovers through the grid with the nylon brush before removing.

### 4. Remove & Clean Dicing and Finger Plate



Wash plates in warm water and detergent then rinse in lukewarm water.

### 5. Run Water Through



Place a pan under the exit chute and pour lukewarm water from the top through the knife chamber. Run wet cloth through feed tube. Wipe with a clean dry cloth.