


advansys AM VENTLESS WAREWASHING

TO OPERATE:

1. Place strainer screen and scrap basket into position in the dishwasher tank. **A**
2. Close the door (this automatically closes drain) and push the "ON" button. The word "FILL" will be displayed. **B**
3. When fill is complete, the readout will display the wash water temperature. Select the wash cycle: 1 for normal serving ware, 2, 4 or 6 for heavier soiled items, toggle through cycle options by pressing the CYCLE button. After filling a dishrack, open the door and slide the rack in the machine.
4. Close the door, the machine will start automatically and the cycle light will turn on.

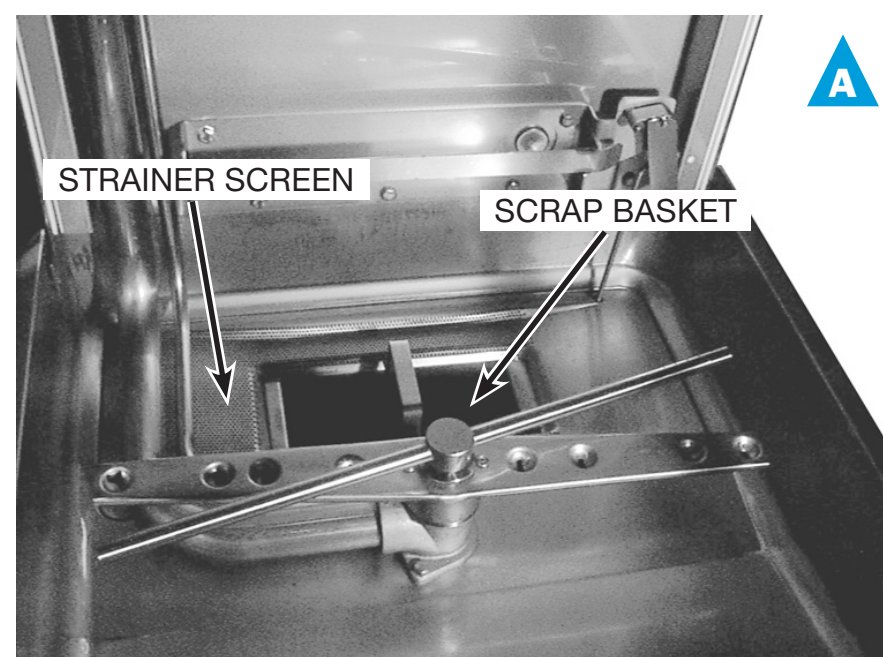

NOTE: Each wash cycle is followed by an automatic rinse. Throughout the wash portion of the cycle, the wash water temperature is displayed, along with the word WASH and an icon. During the rinse portion, the rinse water temperature will be displayed, along with the word RINSE and an icon, followed by 30-45 second CONDENSING CYCLE with countdown timer displayed.




5. Do not open door until cycle light turns off and countdown timer is no longer displayed.

OPERATIONAL TIPS:

- Pre-scrap ware to remove large food particles and debris.
- Do not stack dishes or dishracks one on top of another.
- Use only commercial detergents and chemicals with the AM Dishmachine.
- Consult chemical professional for deliming frequency required. Deliming instructions located on the front panel in the lower right hand corner.

TO CLEAN:

1. Push the OFF button. **B**
2. Open the machine door.
3. Clean off dishtables into the dishwasher.
4. Drain the machine by lifting up the drain lever. **C**
5. Remove racktrack, strainer screen and scrap basket, wash and rinse thoroughly. **D**
6. Remove the overflow tube, wash and rinse inside and out. **E**
7. Thoroughly cleanse and flush the dishwasher interior. Remove any remaining food soil.
8. Make sure wash and rinse arms rotate freely and are clear of any obstructions. If not, remove arms and clean out obstructions.
9. Re-assemble the machine
 - a. Replace overflow tube, scrap screen and scrap basket
 - b. Install wash and rinse arms if removed
 - c. Replace racktrack
10. Wipe down machine exterior with a clean, wet dishcloth. **DO NOT USE STEEL WOOL, A SCOURING PAD OR ABRASIVE MATERIAL TO CLEAN THE MACHINE.**
11. Approximately every 6-12 months, remove and clean baffles (above the upper wash and rinse arms).

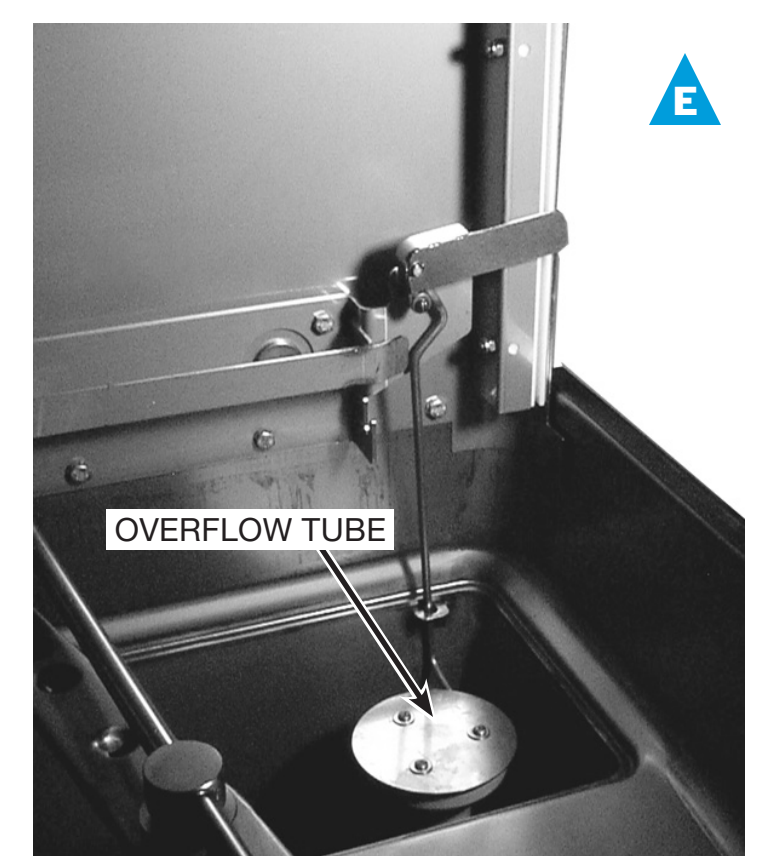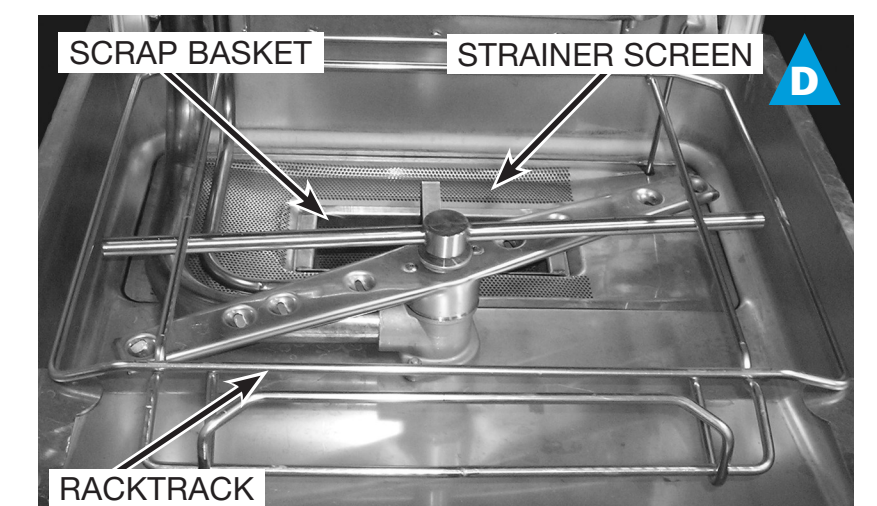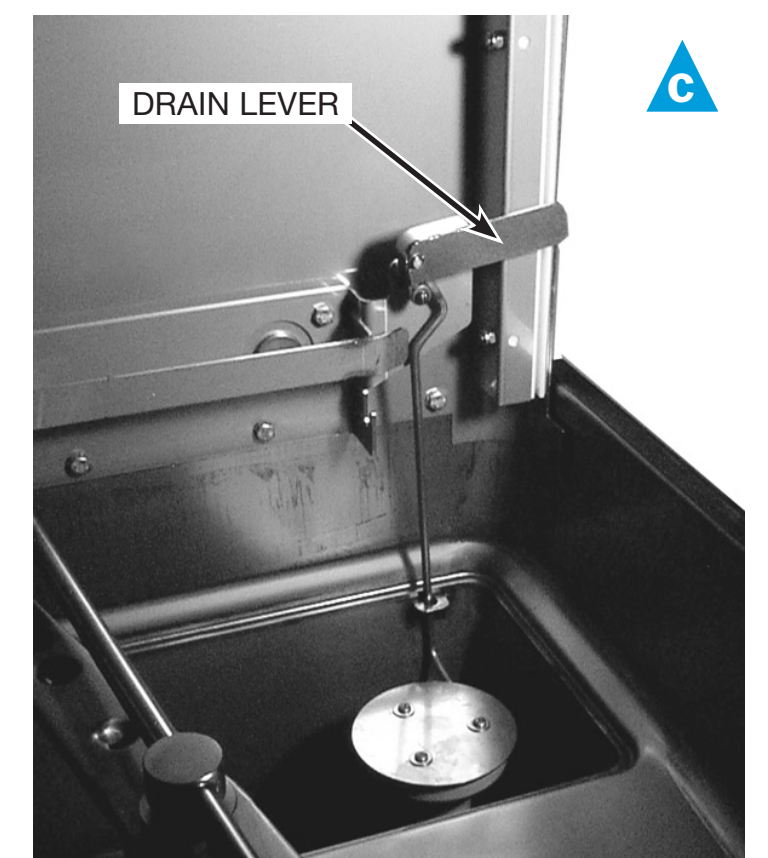

NOTE: For end of the day cleaning, complete steps 1 through 10 and leave the door open to allow the interior to air out and dry.

HOBART

701 S. Ridge Avenue, Troy, OH 45374-0001
Phone: (937) 332-3000 www.hobartcorp.com