

MILK COOLER – TIPS & TRICKS

1. Regularly clean the condenser coil and filter

Disconnect electrical power to the cabinet and remove the system side cover. Proceed to vacuum or brush any dirt, lint, or dust from the finned condenser coil/filter, the compressor, and other cooling system parts.

2. Replace the door gaskets

To remove the gasket, grasp it firmly by one corner and pull it out. Before attempting to install a new gasket, both the unit and the gasket must be at room temperature. Insert the four corners first of the new gasket, then work your way towards the center from both ends by gently hitting with a mallet until the gasket is completely seated in place.

3. Clean the cabinet surfaces

Exterior stainless steel should be cleaned with warm water, mild soap, and a soft cloth. Apply with a dampened cloth and wipe in the direction of the metal grain.

