


# OPERATION and ERROR CARD

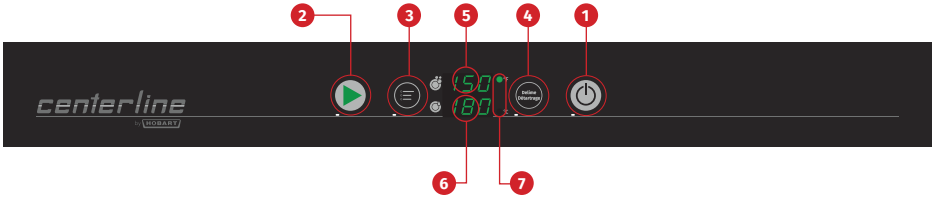

## 1. POWER/DRAIN BUTTON

Pressing this button switches the machine on, fills and heats the wash tank. Pressing and holding (3 seconds) activates self-cleaning cycle, drains machine, and then switches the machine off automatically. After machine is switched off, however, the machine still has voltage.

## 2. START BUTTON

Pressing this button starts the wash cycle. If pressed a 2nd time within 10 seconds of the first press, the extended wash cycle is activated.

## 3. MENU BUTTON\*

Pressing this button enters the configuration menu

## 4. DELIME BUTTON\*

Pressing and holding (3 seconds) activates the delimiting cycle.

## 5. TEMPERATURE DISPLAY, WASH TANK

Displays wash tank temperature while machine is in ready state or in a wash cycle.

## 6. TEMPERATURE DISPLAY, RINSE

Displays rinse temperature only when rinse is active.

## 7. TEMPERATURE UNITS

LED lights for °F or °C

## WASH PROGRAM

*Normal wash* for average soiled dishes – 2 minutes  
*Extended wash* for heavy soiled dishes – 3 to 6 minutes\*

SCAN TO VISIT  
THE CENTERLINE™  
RESOURCE CENTER:



[www.hobartcorp.com/CenterlineUCTraining](http://www.hobartcorp.com/CenterlineUCTraining)

\*For more detail review Operation and Install manual

Error Code	Symptom	Possible Solution*
01	Booster Above Temperature Upper Limit	<ol style="list-style-type: none"> <li>1. Press the power button to power off (Provide 20 min to cool off).</li> <li>2. Restart as normal.</li> <li>3. If error code persists, contact qualified Hobart Service.</li> </ol>
02	Booster Below Temperature Lower Limit	<ol style="list-style-type: none"> <li>1. Press the power button to power off.</li> <li>2. Restart as normal.</li> <li>3. If error continues to display – Contact Hobart Service.</li> <li>4. Possible tripped high limit protector or heating element malfunction.</li> </ol>
03	Rinse Assurance	<ol style="list-style-type: none"> <li>1. Booster did not meet temperature or water level requirements.</li> <li>2. If booster does not reach temperature or water level set point, a long wash cycle of 10-20 minutes will trigger.</li> <li>3. If error continues to display on next cycle, there could be a tripped high limit protector, heating element malfunction, or fill valve malfunction – Contact Hobart Service.</li> </ol>
05	Wash Tank Above Temperature Upper Limit	<ol style="list-style-type: none"> <li>1. Press the power button to power off (Provide 20 min to cool off).</li> <li>2. Restart as normal.</li> <li>3. If error continues to display – Contact Hobart Service.</li> </ol>

Error Code	Symptom	Possible Solution*
06	Wash Tank Below Temperature Lower Limit	<ol style="list-style-type: none"> <li>1. Press the power button to power off.</li> <li>2. Restart as normal.</li> <li>3. If error continues to display – Contact Hobart Service.</li> <li>4. Possible tripped high limit protector or heating element malfunction.</li> </ol>
07	Booster Pressure Level Sensor Above Upper Limit	<ol style="list-style-type: none"> <li>1. Press the power button = power off/on and start fill process.</li> <li>2. Drain tank and refill.</li> <li>3. If error continue to display – Contact Hobart Service.</li> </ol>
08	Booster Pressure Level Sensor Below Lower Limit	
09	Wash Tank Pressure Level Sensor Above Upper Limit	
10	Wash Tank Pressure Level Sensor Below Lower Limit	
12	Drain Overflow Limit	<ol style="list-style-type: none"> <li>1. Tank water level reach maximum level. Drain pump attempting to drain.</li> <li>2. Verify drain hose is not pinched or kinked.</li> <li>3. Drain pump running until water level is below setpoint or time limit and then power off.</li> <li>4. If error continues to display, possible drain pump malfunction – Contact Hobart Service.</li> </ol>
13	Wash Tank Fill Time Exceeded	<ol style="list-style-type: none"> <li>1. Cycle power button off and then on to continue filling.</li> <li>2. If error continues to display, then cycle power off to drain tank.</li> <li>3. Check wash and rinse arms for clogged nozzles.</li> <li>4. Restart as normal.</li> </ol>
14	Drain Error – Shutdown (Took too long to drain)	<ol style="list-style-type: none"> <li>1. Verify drain hose is not pinched or correct drain connection.</li> <li>2. Check drain hose for any debris and drain again.</li> <li>3. If error continue to display – Contact Hobart Service.</li> </ol>
18	Fill Error – Booster (Booster taking too long to fill)	<ol style="list-style-type: none"> <li>1. Verify fill hose is not pinched or kinked.</li> <li>2. Check that water is being supplied to machine.</li> <li>3. Error will clear once water fills booster to setpoint.</li> <li>4. If error continues to display, possible fill valve malfunction – Contact Hobart Service.</li> </ol>
19	Chemical Deficiency Detergent / Rinse Aid / Sanitizer	<ol style="list-style-type: none"> <li>1. Low or no chemicals.</li> <li>2. Float level on bottle level sensor below working condition.</li> <li>3. If no bottle level sensor, jumpers are missing from chemical level sensor connectors.</li> </ol>
Do or R	Program Interrupted fill, wash, or delime)	<ol style="list-style-type: none"> <li>1. Machine is fill, wash or delime cycle.</li> <li>2. Verify door is closed.</li> <li>3. If cycle running, then there is a display updating delay.</li> </ol>
22	Low Rinse Temperature	<ol style="list-style-type: none"> <li>1. Rinse temperature below setpoint on 3 consecutive cycles.</li> <li>2. Error will clear if rinse temperature meets or exceeds setpoint.</li> </ol>
24	USB Drive Not Detected	<ol style="list-style-type: none"> <li>1. USB not properly configured or incorrect directory path.</li> </ol>
25	Communication Error	<ol style="list-style-type: none"> <li>1. Internal communication error</li> </ol>
FIL	Low Water Level at Start of Wash Cycle	<ol style="list-style-type: none"> <li>1. Item(s) from previous wash cycle removed large amount of water from dishwasher.</li> <li>2. Automatically correct after press of Start button.</li> <li>3. Wash tank will fill to proper level and heat to proper temperature then wash cycle will resume.</li> </ol>
30	Booster Heat Up Time Exceeded at Startup	<ol style="list-style-type: none"> <li>1. Press the power button to power off and drain tank.</li> <li>2. Restart as normal.</li> <li>3. If error continue to display, unplug the machine from the wall. If unit is hardwired, turn circuit breaker off then back on.</li> <li>4. Tripped High Limit or heating element malfunction – Contact Hobart Service.</li> </ol>
31	Fill Error	<ol style="list-style-type: none"> <li>1. System time out during fill or wash cycle.</li> <li>2. Press the power button to power off machine.</li> <li>3. Verify fill hose is not pinched or kinked.</li> <li>4. Check that water is being supplied to machine.</li> <li>5. Restart as normal.</li> <li>6. If error continues to display, possible fill valve malfunction – Contact Hobart Service.</li> </ol>

**NOTE: SWITCHING DISHWASHER OFF AND THEN ON “RESETS” THE SIGNALS.**

**\*IF ERROR CODE PERSISTS, CONTACT HOBART SERVICE:**

**1-888-4HOBART**

**centerline**  
by **HOBART**