


Daily Cleaning Checklist: Mixers

How to Keep Your Equipment in Top Shape

1. Unplug Power Cord

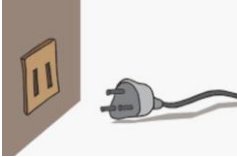

Before cleaning any part of a Hobart mixer, unplug the power cord. Never clean the mixer with a hose.

2. Remove Bowl Guard Wire Cage



Remove the bowl guard cage by rotating it to the left, lifting up and then pulling toward you. Wash the bowl guard wire cage in a 3-compartment sink, rinse with clear water and dry with a clean cloth.

3. Remove Mixer Bowl



Remove the mixer bowl and wash in a 3-compartment sink or a warewash machine.

4. Remove Agitator



Remove the agitator by pulling the spring-loaded knob and sliding the agitator down the shaft. Wash the agitator in a 3-compartment sink or a warewash machine.

5. Wipe Down Mixer



Wipe down the mixer with a clean cloth and warm, soapy water. Rinse with clear water and dry with a clean cloth. The mixer base allows ample room for cleaning under the mixer.