





TRAYSLIDES: G-SERIES 1-SECTION

Parts	Universals		#1 Trayslides		#4 Trayslides	
Kit Model	G1ACC-TK4		G1ACC-TK1		G1ACC-TK2	
	Model #	QTY	Model #	QTY	Model #	QTY
Pilasters: Front Left, Back Right	342-60031-00	2	342-60032-00	2	342-60032-00	2
Pilasters: Front Right, Back Left	342-60033-00	2	342-60034-00	2	342-60034-00	2
Thumb Screws	351-15822-01	24	351-15822-01	24	351-15822-01	24
Trayslide Inserts	701-60039-00	14	701-60032-00	16	340-04842-00	4

RECOMMENDED TOOLS:

Flathead Screwdriver & Rubber Mallet

INSTALL UNIVERSALS

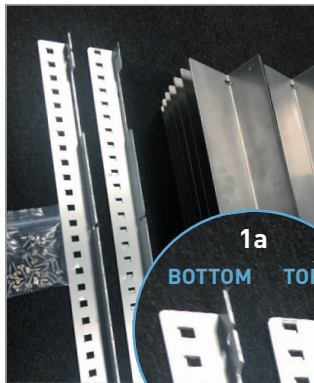
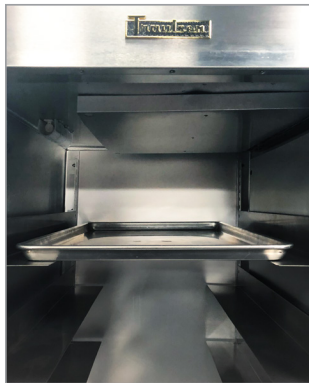


Bottom Support 18x26 or 12x20 Pans

KIT: G1ACC-TK4


TRAYSLIDE PART: 701-60039-00

- (Fig. 1a) Identify the top side of each Pilaster.**
 - The top should have the smaller gap from end to first cut out.
- Remove the factory installed shelves, pins, and pilasters.**
- Install the back left and front right Pilasters with 6 thumb screws each.**
 - Hand tighten the thumb screws, check that the Pilasters are parallel with the sides of the cabinet, and then tighten down with a flathead screwdriver.
- Repeat step 2 with the back right and front left Pilasters.**

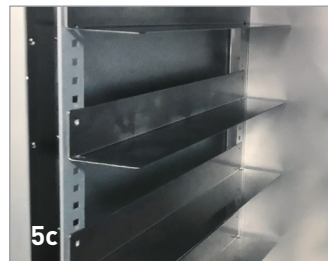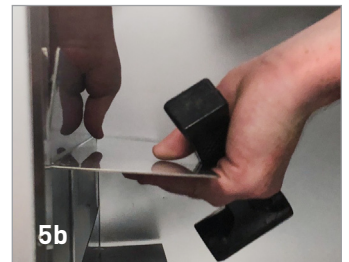

- Begin installing the Trayslides on one side from bottom to top.**
 - (Fig. 5a) Insert all tabs on one side (left/right) and press down to lock them into the Pilaster.
 - (Fig. 5b) Insert all tabs on the other side and press down to lock them into the Pilaster.
 - (Fig. 5c) Check that the Trayslides are level and on the same Pilaster slots.
 - (Fig. 5d) Using a rubber mallet, tap down the Trayslide near both Pilasters to lock the Trayslides into place.
- Repeat step 5 on the other side of the cabinet.**
- Test on all sets of Trayslides to make sure that the Pilasters and Trayslides have been installed level.**

INSTALL #1 TRAYSLIDES

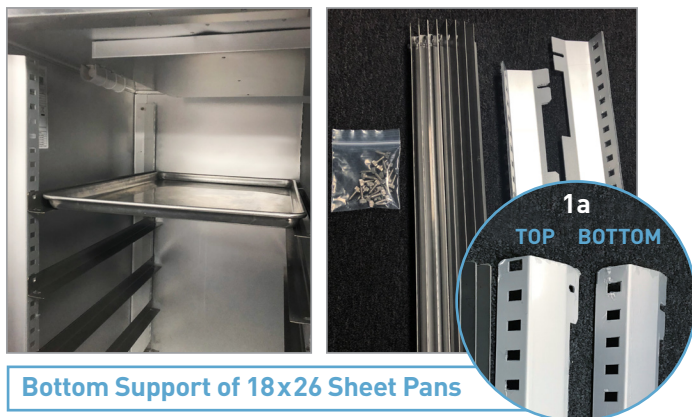

Bottom Support of 18x26 Sheet Pans

KIT: G1ACC-TK1

TRAYSLIDE PART: 701-60032-00

1. (Fig. 1a) Identify the top side of each Pilaster.
 - The top should have the smaller gap from end to first cut out.
2. Remove the factory installed shelves, pins, and pilasters.
3. (Fig. 3a) Install the back left and front right Pilasters with 6 thumb screws each.
 - Hand tighten the thumb screws, check that the Pilasters are parallel with the sides of the cabinet, and then tighten down with a flathead screwdriver.

[CLICK HERE TO WATCH #1 HOW-TO VIDEO](#)

INSTALL #4 TRAYSLIDES




Lip Support of 18x26 Sheet Pans

KIT: G1ACC-TK2

TRAYSLIDE PART: 340-04842-00

1. (Fig. 1a) Identify the top side of each Pilaster.
 - The top should have the smaller gap from end to first cut out.
2. Remove the factory installed shelves, pins, and pilasters.
3. Install the back left and front right Pilasters with 6 thumb screws each.
 - Hand tighten the thumb screws, check that the Pilasters are parallel with the sides of the cabinet, and then tighten down

[CLICK HERE TO WATCH #4 HOW-TO VIDEO](#)

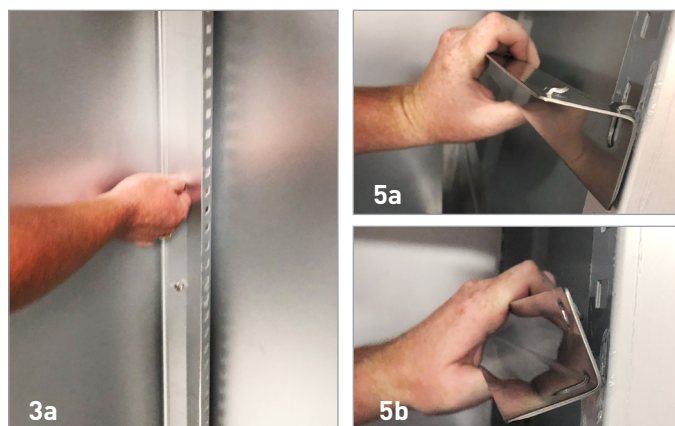

4. Repeat step 2 with the back right and front left Pilasters.
5. Begin installing the Trayslides on one side from bottom to top.
 - (Fig. 5a) Insert the bottom set of tabs into the slots at desired height.
 - (Fig. 5b) On one side, insert the top tab into the Pilaster slot, and tap the top of the Trayslide near that Pilaster with a rubber mallet.
 - Repeat on the other side of the Trayslide while being careful not to unseat the side that was installed first.
 - Once both ends are seated in the Pilaster slots, tap the top of the Trayslide with a rubber mallet near both Pilasters to secure it.
6. Repeat step 5 on the other side of the cabinet.
7. Test on all sets of Trayslides to make sure that the Pilasters and Trayslides have been installed level.



with a flathead screwdriver.

4. Repeat step 2 with the back right and front left Pilasters.
5. Begin installing the Trayslides on one side from bottom to top.
 - (Fig. 5a) Line up tabs on the Trayslides with the Pilasters
 - (Fig. 5b) Fit the tabs in place and push downward to lock into position.
 - If not all of the tabs fit into the Pilasters, check that the Pilasters are straight and right side up.
6. (Fig. 6a) Repeat step 5 on the other side of the cabinet.
7. Test on all sets of Trayslides to make sure that the Pilasters and Trayslides have been installed level.