




TRAYSLIDES: G-SERIES 1-SECTION

| Parts | Universals | | #1 Trayslides | | #4 Trayslides | |
|---|--------------|-----|---------------|-----|---------------|-----|
| Kit Model | G1ACC-TK4 | | G1ACC-TK1 | | G1ACC-TK2 | |
| | Model # | QTY | Model # | QTY | Model # | QTY |
| Top Pilasters: Left Front, Right Rear | 342-60171-01 | 2 | 342-60169-01 | 2 | 342-60169-01 | 2 |
| Bottom Pilasters: Left Front, Right Rear | 342-60171-02 | 2 | 342-60169-02 | 2 | 342-60169-02 | 2 |
| Top Pilasters: Right Front, Left Rear | 342-60172-01 | 2 | 342-60170-01 | 2 | 342-60170-01 | 2 |
| Bottom Pilasters: Right Front, Left Rear | 342-60172-02 | 2 | 342-60170-02 | 2 | 342-60170-02 | 2 |
| Thumb Screws | 351-15822-07 | 24 | 351-15822-07 | 24 | 351-15822-07 | 24 |
| Trayslide Inserts | 701-60039-00 | 14 | 701-60032-00 | 16 | 340-04842-00 | 4 |

RECOMMENDED TOOLS:

Flathead Screwdriver & Rubber Mallet

INSTALL UNIVERSALS

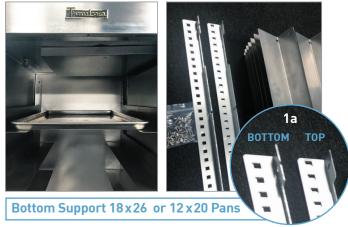



KIT: G1ACC-TK4

TRAYSLIDE PART: 701-60039-00

- 1. (Fig. 1a) Identify the top side of each pilaster.
- 2. Remove the factory installed shelves, pins, and pilasters.
- 3. Install the top section pilasters with 3 thumb screws each.
 - Hand tighten the thumb screws, check that the pilasters are parallel with the sides of the cabinet, and then tighten down with a flathead screwdriver.
- 4. Repeat step 2 with the bottom section pilasters.









- 5. Begin installing the trayslides on one side from bottom to top.
- (Fig. 5a) Insert all tabs on one side (left/right) and press down to lock them into the pilaster.
- (Fig. 5b) Insert all tabs on the other side and press down to lock them into the pilaster.
- (Fig. 5c) Check that the tray slides are level and on the same pilaster slots.
- (Fig. 5d) Using a rubber mallet, tap down the trayslide near both pilasters to lock the trayslides into place.
- 6. Repeat step 5 on the other side of the cabinet.
- 7. Test on all sets of trayslides to make sure that the pilasters and trayslides have been installed level.



INSTALL #1 TRAYSLIDES





TRAYSLIDE PART: 701-60032-00

- 1. (Fig. 1a) Identify the top side of each pilaster.
- 2. Remove the factory installed shelves, pins, and pilasters.
- 3. (Fig. 3a) Install the top section pilasters with 3 thumb screws each.
 - Hand tighten the thumb screws, check that the pilasters are parallel with the sides of the cabinet, and then tighten down with a flathead screwdriver.
- 4. Repeat step 2 with the bottom section pilasters.

• (Fig. 5b) On one side, insert the top tab into the pilaster slot, and tap

• (Fig. 5a) Insert the bottom set of tabs into the slots at desired height.

5. Begin installing the trayslides on one side from bottom to top.

- the top of the trayslide near that pilaster with a rubber mallet.
- Repeat on the other side of the trayslide while being careful not to unseat the side that was installed first.
- Once both ends are seated in the pilaster slots, tap the top of the trayslide with a rubber mallet near both pilasters to secure it.
- 6. Repeat step 5 on the other side of the cabinet.
- 7. Test on all sets of trayslides to make sure that the pilasters and trayslides have been installed level.

INSTALL #4 TRAYSLIDES



KIT: G1ACC-TK2

TRAYSLIDE PART: 340-04842-00

- 1. (Fig. 1a) Identify the top side of each pilaster.
- 2. Remove the factory installed shelves, pins, and pilasters.
- 3. Install the top section pilasters with 3 thumb screws each.
 - Hand tighten the thumb screws, check that the pilasters are parallel with the sides of the cabinet, and then tighten down with a flathead screwdriver.
- 4. Repeat step 2 with the bottom section pilasters.







- 5. Begin installing the trayslides on one side from bottom to top.
 - (Fig. 5a) Line up tabs on the trayslides with the pilasters
 - (Fig. 5b) Fit the tabs in place and push downward to lock into position.
 - If not all of the tabs fit into the pilasters, check that the pilasters are straight and right side up.
- 6. (Fig. 6a) Repeat step 5 on the other side of the cabinet.
- 7. Test on all sets of trayslides to make sure that the pilasters and trayslides have been installed level.